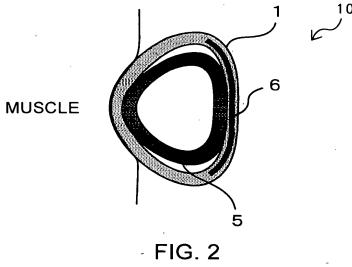


FIG. 1



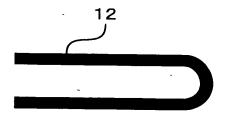


FIG. 3A

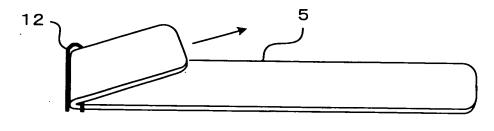


FIG. 3B


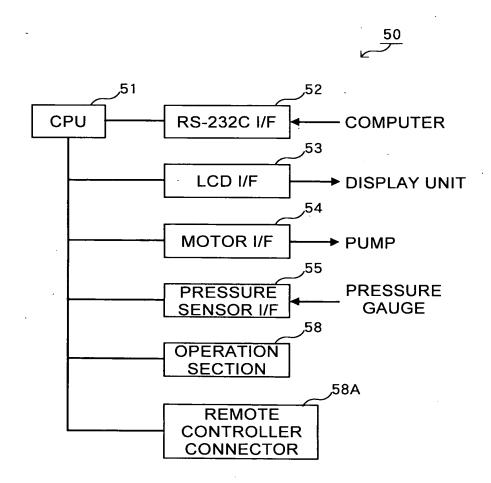


FIG. 4

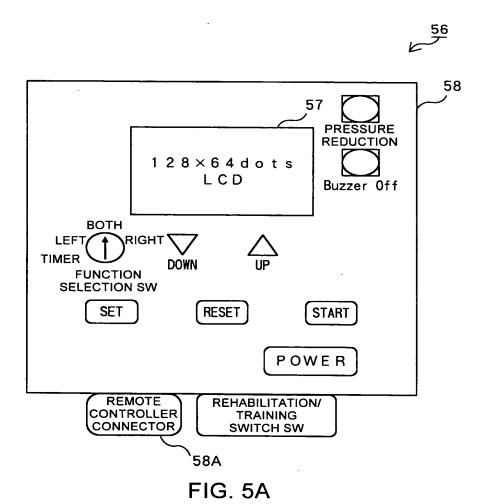


 ★ 345
 ★ 456

 0 1 2
 789

 ▼ ♣
 23min.

FIG. 5B

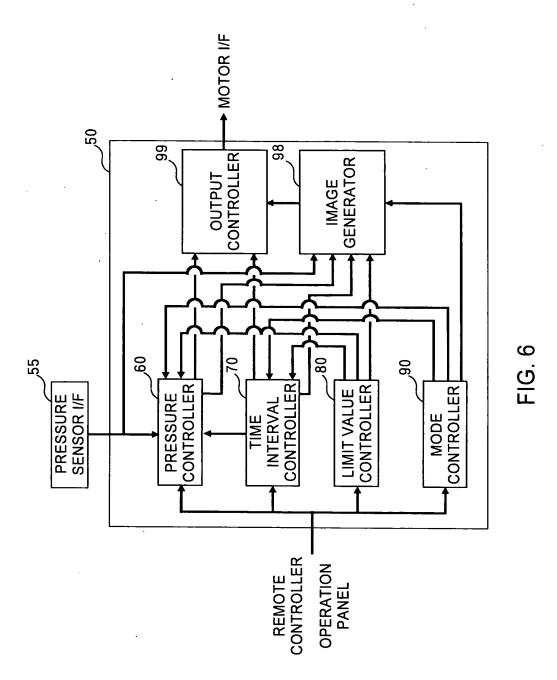

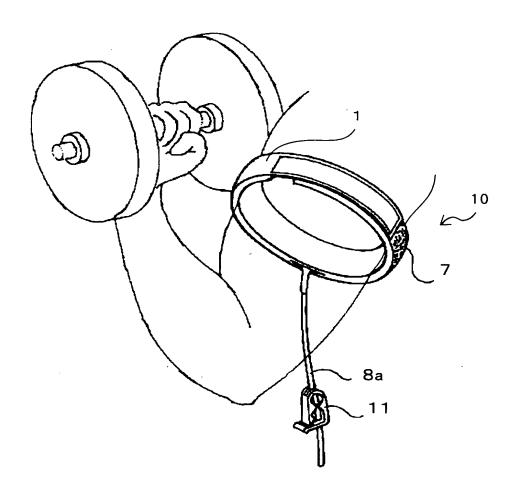


FIG. 7

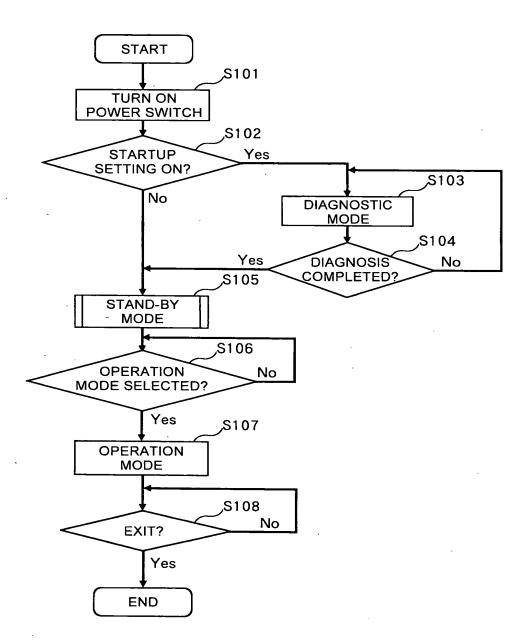


FIG. 8

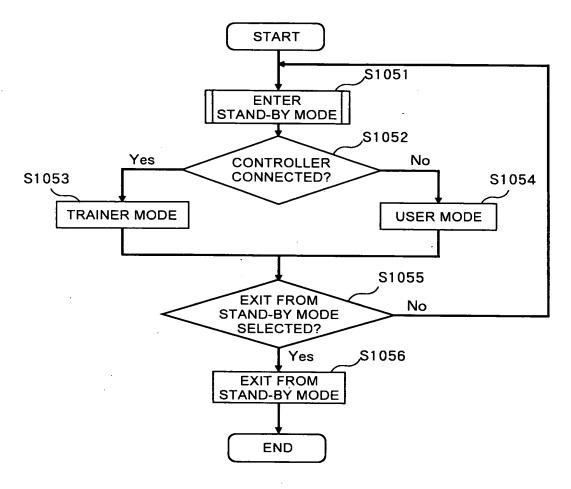


FIG. 9

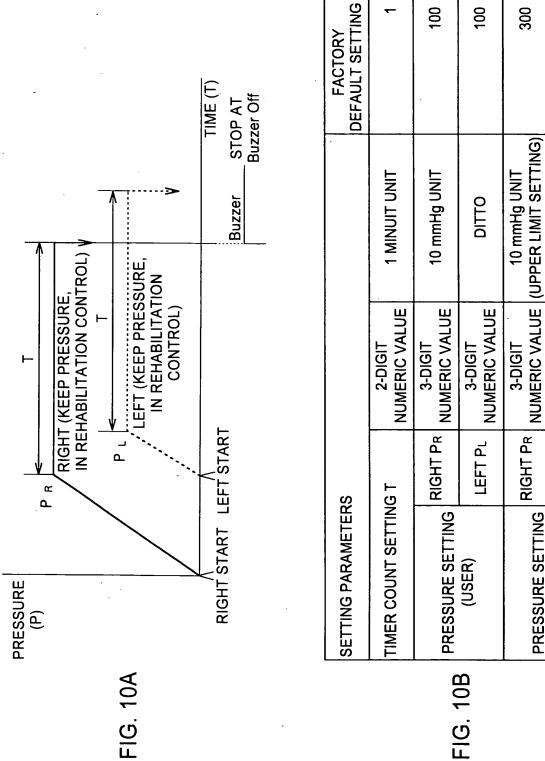


FIG. 10B

300

DITTO

**NUMERIC VALUE** 3-DIGIT

LEFT PL

PRESSURE SETTING (TRAINER)

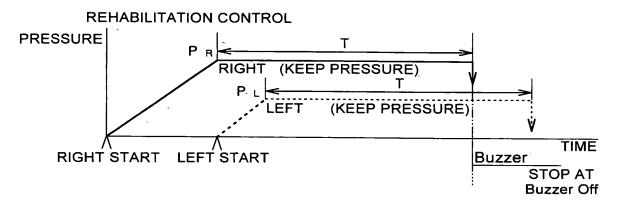


FIG. 11A

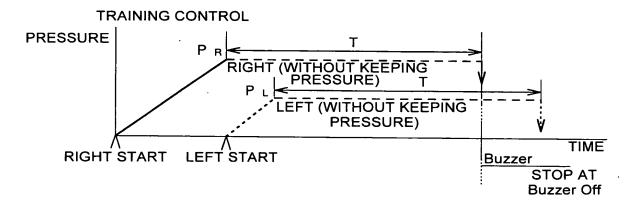
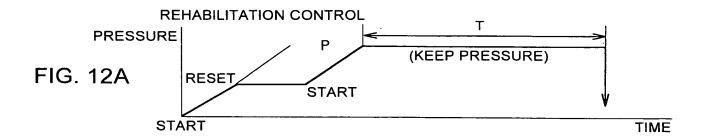
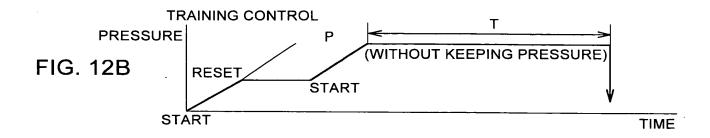
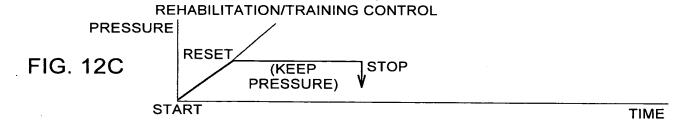
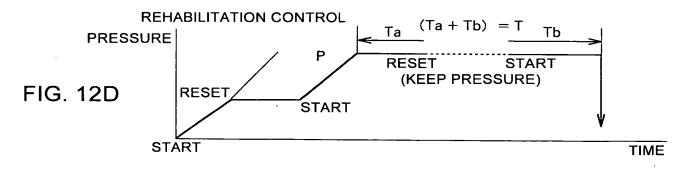



FIG. 11B










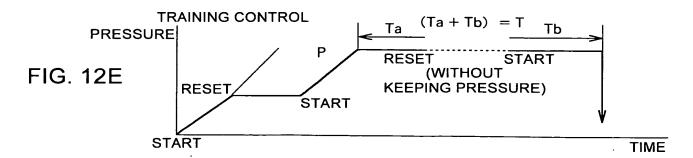

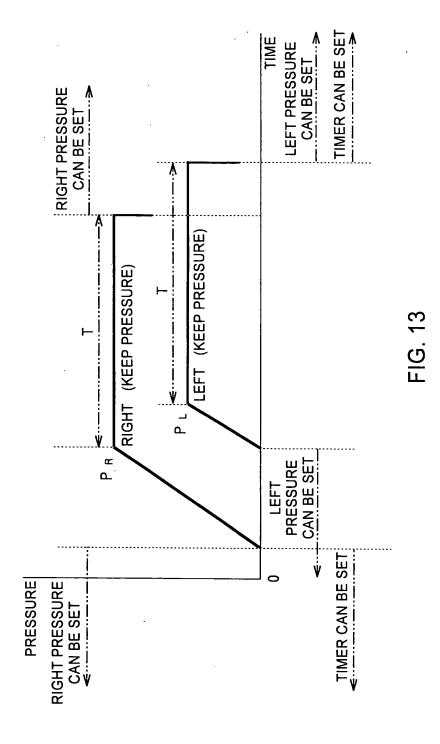




FIG. 14A

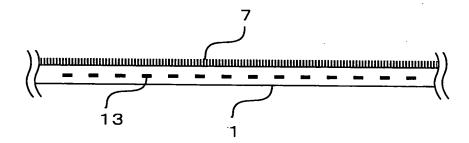


FIG. 14B

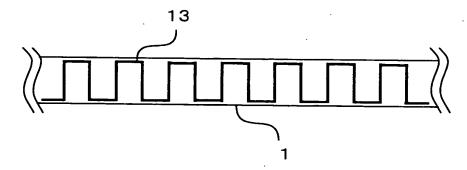


FIG. 15

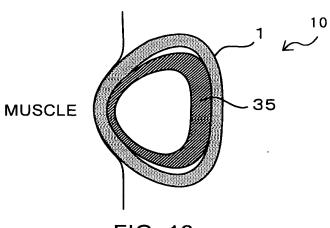


FIG. 16

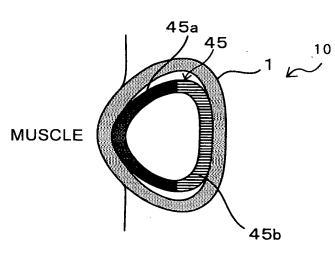


FIG. 17

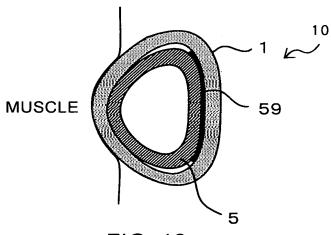


FIG. 18

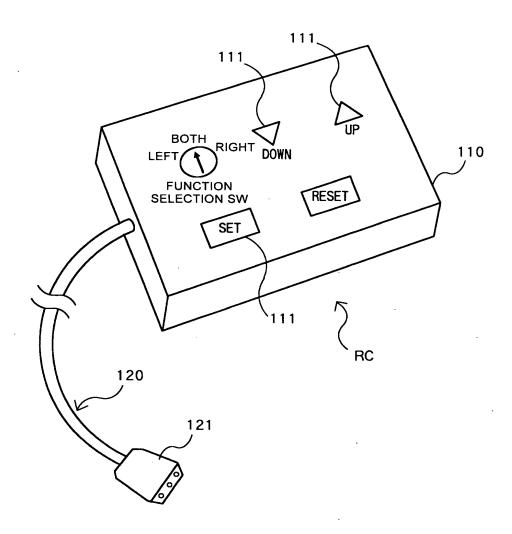


FIG. 19

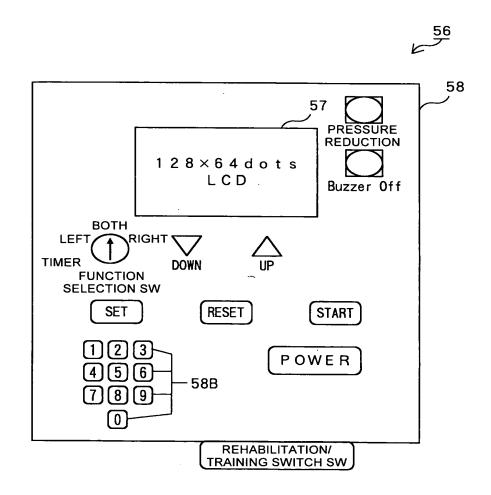


FIG. 20

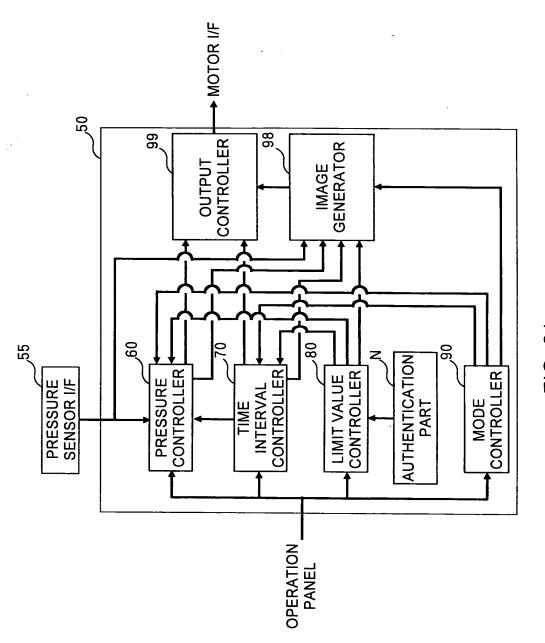


FIG. 21

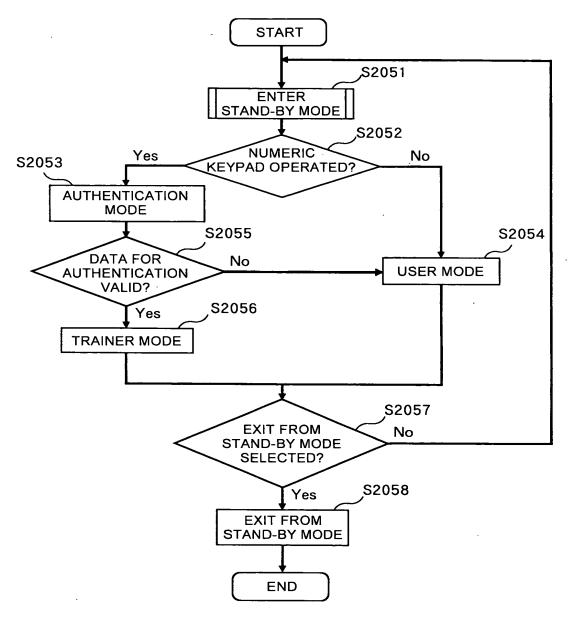


FIG. 22

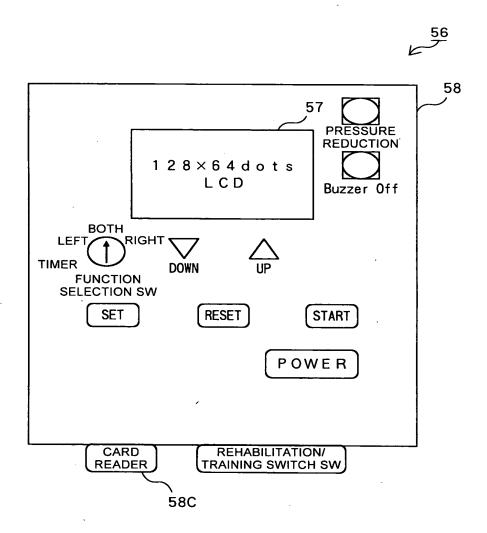


FIG. 23

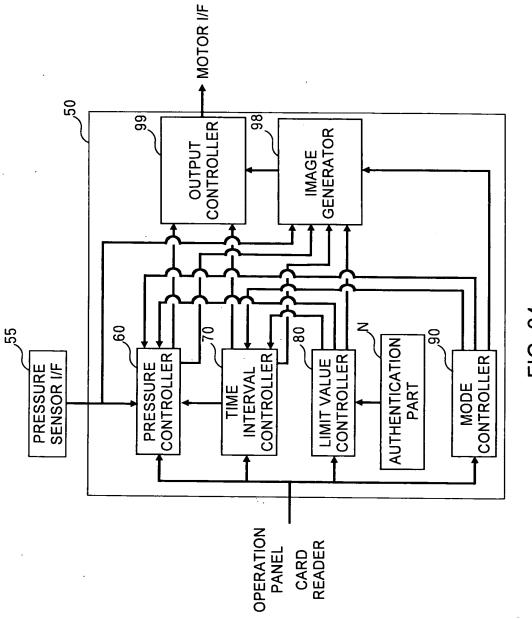


FIG. 24

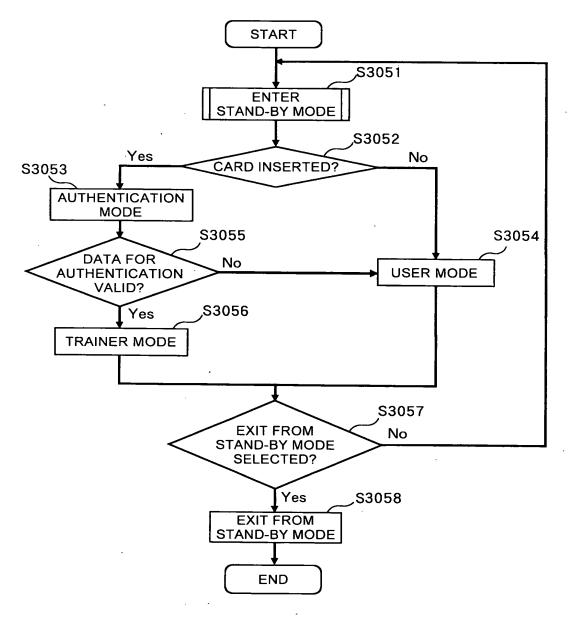


FIG. 25